


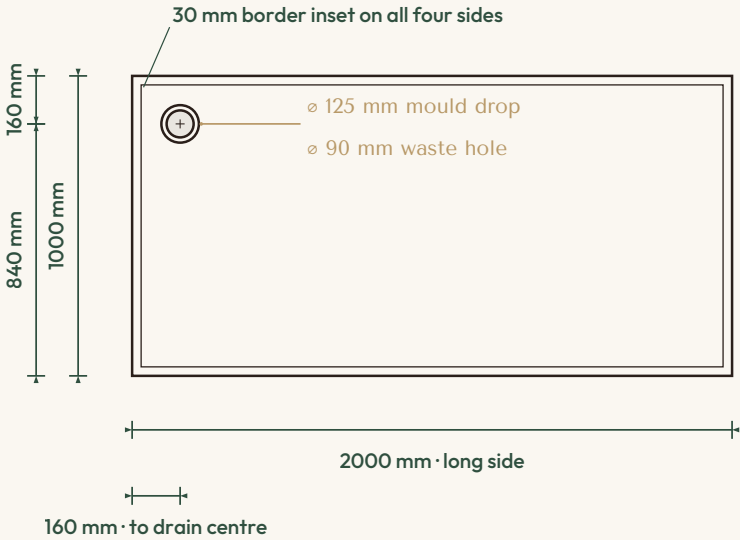

SIDE ELEVATION

Drawn 1:14 · vertical scale exaggerated 1.5× — true slope is barely visible




Specification

DIMENSIONS	2000 × 1000 × 45 mm
BORDER INSET	30 mm all sides
WASTE	Ø 90 mm hole · 160 mm from short edge · 160 mm from long edge · accepts any 90 mm waste
MOULD DROP	Ø 125 mm × 5 mm deep
INTERNAL FALL	~20 mm to drain
DRY WEIGHT	31.8 kg
MATERIAL	7-layer Omnigel built-up system
FINISH	Hand-Polished or Matte · choose in the OmniStudio
SURFACE	Non-slip surface
COLOUR	Pure White (BS 4800 00 E 55) · matched to any RAL · Pantone · Farrow & Ball · Dulux
INSTALLATION	Above-floor on feet, timber bearers, or solid blocking · recessed install also supported
LEAD TIME	White from stock · coloured made to order
DELIVERY	Free UK Named Day Delivery · international to 220+ countries
WARRANTY	30-year
MADE IN	Somerset, United Kingdom

All dimensions in millimetres · Drawn at scale 1:14 · Waste hole accepts any 90 mm shower waste, sold separately.

ON THE OMNITUB RISER KIT


Optional adjustable feet — supplied free with every tray

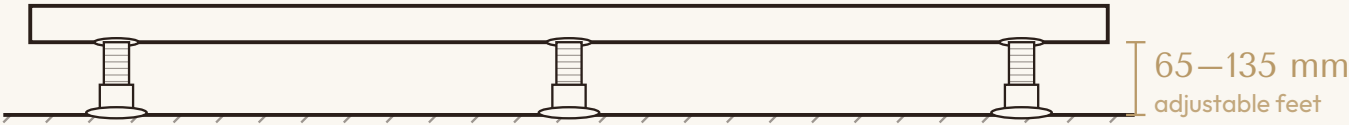

Raise it on the adjustable feet — included free

Prefer to set your tray on a riser kit? Every Omnitub shower tray is supplied with a set of white, self-levelling adjustable feet at **no extra cost** — where other brands charge separately. They lift the tray on telescopic legs over a clear void, so the waste and trap route neatly beneath it and you can fine-level even an uneven or suspended floor. Fit the feet, or bed the tray solid — your choice.

OMNITUB FEET · SUPPLIED FREE

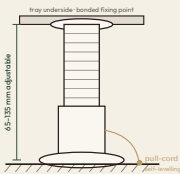

HEIGHT	65–135 mm adjustable
RANGE	50–120 mm of travel
LOCK-OUT	Extend fully to lock, then wind down
FINISH	White
LEVELLING	Pull-cord, self-levelling
FIXING	Screws to bonded points under the tray
SUPPLIED	Set supplied with your tray

Installation

Every Omnitub shower tray is a handmade 7-layer Omnigel built-up system — rigid, fully encapsulated and impervious from edge to edge. Fitted correctly it gives a flush, watertight shower floor that lasts a lifetime. It can be installed two ways; both must leave the tray **fully and continuously supported**, dead level and sealed.

BEFORE YOU START

- Inspect the tray for damage before fitting — never install a damaged tray.
- The sub-floor must be sound, rigid, clean, dry and level; strengthen any springy or suspended floor first.
- Have the waste ready (sold separately) and, for Method B, the Omnitub feet supplied to hand.

TWO WAYS TO INSTALL


A • Bedded onto a solid base. Lay the tray on a full, continuous bed of tile adhesive or sand-and-cement mortar across the whole footprint, leaving no voids. Best where the floor is solid and close to finished level.

B • On the Omnitub feet supplied. Screw the Omnitub feet to the bonded points under the tray, stand it in place, fully extend each foot to engage the lock, then wind it back down to the floor — ideal for routing the waste beneath the tray or fine-levelling an uneven floor. Pack solid for full support once levelled.

STEP BY STEP

1. Check the sub-floor is sound, rigid, clean, dry and level; strengthen any springy floor first.
2. Fit and seal the waste, connect to the trap and test for leaks before fixing (90 mm waste sold separately).
3. Bed the tray on a full bed, or fit the feet and pack solid — the base must be fully supported, with no voids.
4. Set the tray dead level in both directions and confirm the gentle fall runs to the waste.
5. Leave it fully supported until the bed cures, and tank the surrounding walls and the wall-to-tray junction.
6. Seal the perimeter with sanitary silicone; tile or panel down to the tray and silicone that joint — never grout it.

Omnitub feet · supplied

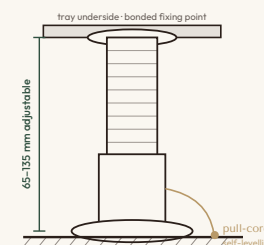

HEIGHT	65–135 mm adjustable
RANGE	50–120 mm of travel
LOCK-OUT	Extend fully to lock, then wind down
FINISH	White
LEVELLING	Pull-cord, self-levelling
FIXING	Screws to bonded points under the tray
SUPPLIED	Set supplied with your tray

1. Screw an Omnitub foot to each fixing point. **2.** Fully extend each foot to engage the lock, then wind it back down. **3.** Stand the tray, connect the waste & pack solid for a firm, level stand. (If a foot winds itself back down, it hasn't locked — extend it fully first.)

Full, continuous support is required. Seal joints with sanitary silicone — never grout the movement joint. 90 mm waste sold separately. Handmade in Somerset.

Backed by our 30-year warranty